


SR-120 / SR-60 / SR35 Umbilical Cord Connections



Connection 1

- Plugs into power source

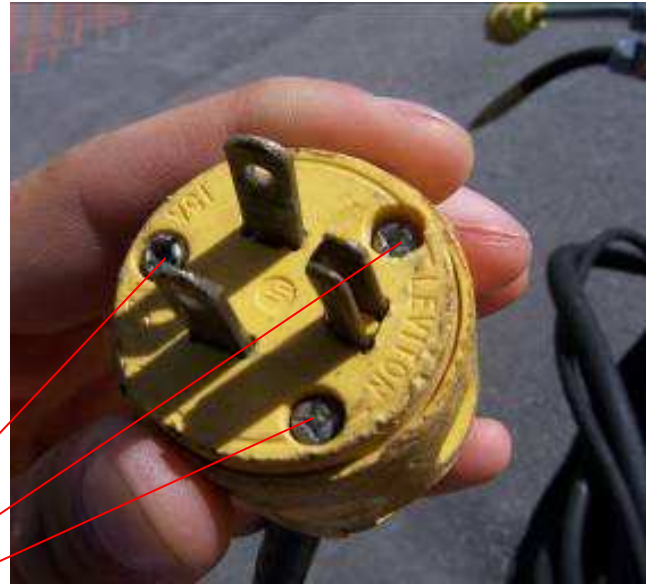

1. Back off screws



Loose wire

2. Remove sleeve and tighten / re-wire any loose wires.

3. Re-assemble

Before checking for loose wires, make sure all connections are un-plugged and are not live.

Connection 2

- Plugs into SR-60

1. Unscrew backing.
2. Remove sleeve by pushing through opening.



3. Tighten / re-wire any loose wires
4. Re-assemble

Before checking for loose wires, make sure all connections are un-plugged and are not live.

Connection 3

- Plugs into umbilical cord

1. Unscrew backing. Force cord casing and seal back.
2. Push through sleeve and tighten / re-wire loose wires.



Before checking for loose wires, make sure all connections are un-plugged and are not live.